- Safety Cautions

 * Observance of relevant laws / regulations are required.

 Read the entire "Instruction Manual" carefully before use, for important information about safety, handling and operation.

TOSHIBA

Toshiba Elevator and Building Systems Corporation

72-34, Horikawa-cho, Saiwai-ku, Kawasaki 212-8585, Japan


PHONE: +81-44-331-7057 FAX: +81-44-548-9597

- The data given in this catalog are subject to change without notice.
- * Revised publication effective Apr. 2019

TOSHIBA

TOSHIBA HIGH SPEED ELEVATORS

New ELBRIGHT

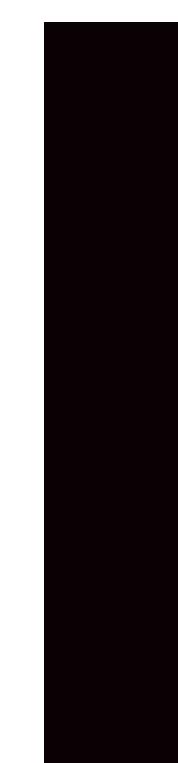

GK-F196(1)-19.04-3000-19.04(NS)

TOSHIBA ELEVATOR AND BUILDING SYSTEMS CORPORATION

THE SOLUTIONS

COMPANY SOLUTIONS

Toshiba Elevator and Building Systems Corporation has built a framework which encompasses all aspects from system development to production, sales to marketing, installation, adjustment, maintenance and services in order to provide clients with the highest quality products and services.

Utilizing the comprehensive technological infrastructure developed by Toshiba Group in more than 140 years since its foundation, we aim to enhance the leading edge technology and quality that we used to develop the ultra high speed elevator, harnessing Toshiba's technological innovations to their fullest extent. To meet clients' expectations and requirements for safe and pleasant elevators as well as constantly pursuing further innovation and improvement. Furthermore, we are aiming to strengthen system development, production, enhancing sales channel and sales partnership to expand in the global market.




New ELBRIGHT TOSHIBA HIGH SPEED ELEVATORS

A new concept in high-speed elevators.

Toshiba never stops introducing the latest technologies and refining its high-speed elevator expertise.

Toshiba proves this again with the New ELBRIGHT: a new elevator for a new age. Toshiba engineering has combined to produce the world's first inverter drive controlled high-speed elevator, with the high-efficiency control, energy efficiency, and quiet operation today's society demands.

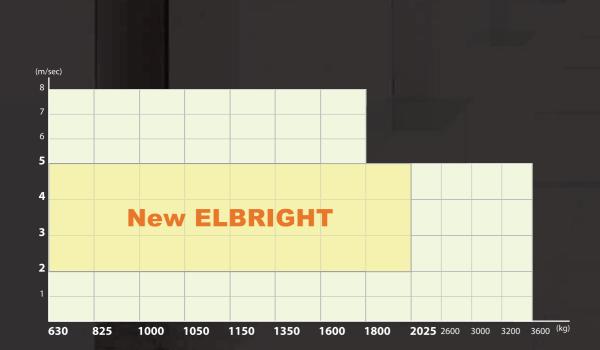





Technology

Toshiba's leading technology has developed a high-speed elevator with a slimline control panel and a compact and lightweight traction machine. We will provide rapid, high performance, high-quality elevator products saving labor, space and power.

Safety

We will offer safety, security, and comfort with customer's needs by providing optional functions for safety control devices such as door open running prevention and door sensors, and optional control operation in the event of a power outage and emergency at earthquakes and fires.

Energy Saving & Environment

Reducing standby power by a new control device, commercializing the regenerative power function, and suppressing the power consumption by the adopting of LED lighting.

We are promoting environmentally friendly products such as eliminating lead and mercury and other hazardous substances from the product and equipment.

Index

The Solutions	
COMPANY SOLUTIONS	. P.
A new concept in high-speed elevators	. P.
Technology	P. 7
Safety	P. 9
Energy Saving & Environment	P.1
Car Design	
RESIDENCE	·· P.1
OFFICE	P.1
HOTEL	· P.1
SHOP	·· P.2
Hall Design	P.23
unctions	P.3
nstallation plan / Power source plan	P.33
Global Network	P.39



Technology

A high-efficiency traction machine and advanced inverter drive controlled are expanding the potential of

New ELBRIGHT

The New ELBRIGHT was developed to be the best an possible elevator, both for the buildings in which it is installed and for those who ride it. Every part of the elevator uses Toshiba's leading technologies; from the traction machine and control system to the cars, doors, and drive system. The New ELBRIGHT will boost the value of the high-speed elevator immensely.

Compact and energy-efficiency via the Permanent Magnet Synchronous Motor

The New ELBRIGHT employs a gearless traction machine using a permanent magnet synchronous motor (PMSM), in place of the conventional induction motor. The PMSM uses a permanent magnet with a high magnetic flux density. This allows a more compact and lightweight traction machine. Furthermore, establishing a permanent magnetic flux eliminates the need to release magnetizing current. This and other advantages pave the way for highly efficient control, which helps to save energy.

A compact slimline control panel realizes space-saving in machine room

The New ELBRIGHT's control system use small inverter unit. It also incorporates peripheral equipment, integrated multifunctional digital line, a compact control panel device and efficiently implemented layout for a slimline control panel. The well thought-out control panel design also reduces working space for maintenance, which frees up space for the machine room.

New control systems

A high performance CPU is employed for the advanced and newly developed control system. This control system cuts the level of standby electricity required and promotes an automatic shutoff system for lighting and ventilation to further boost power savings.

Safety

Unintended Car Movement Protection (Optional)

A traction drive elevator shall include means to prevent uncontrolled movement of the elevator away from the landing with neither the landing nor the car doors in the locked position. The Elevator shall detect uncontrolled movement of the car away from the landing and stop no more than 1200mm after as measured from the landing floor sill. Before operation, the uncontrolled car movement protection system means for an ascending elevator, the clearance between the landing door floor sill and the apron of the stopped elevator shall not exceed 200mm. In additional, uncontrolled movement protection means the horizontal distance between the sill or entrance frame of the stopped elevator and the wall of the well, from the landing floor sill to 1200mm downward for a descending elevator.

Car Door Lock (Optional)


Every car door shall be mechanically locked by at least 7mm such that it can only be opened in the unlocking zone of a landing. The lift operation shall automechanically depend on the locking of the car door. This locking shall be proved by an electrical safety device to confirm the horizontal distance between the well wall and the sill or entrance frame of the car is within 150mm.

Ascending Car Overspeed Protection

A device to prevents an elevator ascending to the elevator shaft top beyond the rated speed due to a device like an electromagnetic brake or control unit. It monitors the speed of the upper direction mechanically by a governor, then cut off the power supply and safety circuit by an overspeed detecting switch when the speed exceeds the rated speed more than 1.3 times. The elevator shall be stopped by triggering the double brake when overspeed occurred.

Multi-beam Door Safety (Optional)

The photoelectric cell detects passengers in the doorway and reopens closing doors.

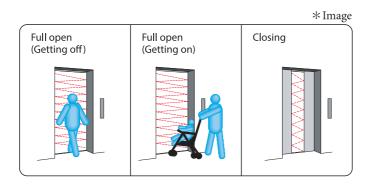

Automatic Landing in Power Failure (Optional)

In case of a power failure, backup lamps are automatically lighted up in the cars, while the system's operation is switched to the elevator system's own battery powered inverter. Cars stranded between floors are taken to the nearest floor; otherwise, doors are opened and passengers are let out. The doors automatically open in case the car stops at any point that is not between floors but where the doors can be opened. (Note: Overridden by any similar backup or safety systems installed in compliance with safety codes.)

Earthquake Emergency Operation (Optional)

When the system's seismic sensor installed in the elevator shaft detects an S-wave (the secondary seismic wave and the main shock of an earthquake) that exceeds the pre-set threshold, the system takes control with emergency procedures. "Earthquake" emergency signs lighted up in all cars, all cars are taken immediately to the nearest floor, doors are opened and passengers are instructed to alight.

Fire Emergency Operation (Optional)

This emergency operation is automatically triggered in case of a fire, when a fire alarm button is actuated, or when a Fire/Smoke Detector detects an abnormality. All hall calls and floor selections are cancelled, passengers are informed of the emergency procedure with a "Fire" sign and a voice announcement and all cars are sent directly to the emergency exit floor. Doors open at the emergency floor and passengers are guided to safety.

Power failure detected. The elevators stop. In each car, the "Power Failure" sign lights up and the in-car PA system instructs passengers with the following message: "Please get off this elevator as soon as the doors open." The car goes to the nearest floor, and the doors open. After a pre-set period, the doors are closed. Normal operation resumes when power supply is back.

Earthquake detected.

0

A seismic sensor triggers emergency operation

0

In each car, the "Earthquake" emergency sign lights up and the in-car PA system instructs passengers with the following message:

"Please get off this elevator as soon as the doors open."

0

The car goes to the nearest floor and the doors open.

0

After a pre-set period, the doors are closed.

Fire

Fire Alarm is actuated.

0

In each car, the "Fire" emergency sign lights up and the in-car PA system instructs passengers with the following message:

"Please get off this elevator as soon as the doors open."

0

The car goes to the emergency exit floor, the doors open.

After a pre-set period, the doors are closed.



Energy Saving & Environment

Products and functions adopted to reduce power consumption

Suppress power consumption by reducing standby power, commercialization of the regenerative power function, adoption of LED lighting.

LED Lightings

Under equal brightness, an LED lighting system only consumes 10% of electrical with comparison of an incandescent lamp and 50% of an fluorescent lamp. (part of the ceiling)

PRM.

Providing environmentally conscious products

Toshiba elevator group is promoting the development of environmentally conscious products, which involves environmentally conscious product design, assessing the environmental impact of products and disclosing the environmental performance of products. Products are developed in compliance with the updated voluntary environmental performance standards.

Product assessment and voluntary environmental standards for products

In developing products, we assess them across their life cycles from manufacturing, logistics and use to disposal and recycling to conduct product development and reduce the environmental impacts on the global environment.

Whereas product assessment is used to confirm the minimum necessary environmentally conscious requirements for product development, Voluntary Environmental Standards for Products have been established in the Toshiba elevator group to create highly environmentally friendly products and products complying with the same are released as environmentally conscious products.

Reducing hazardous materials

[Reduction of lead use]

By changing the method of tying rope, the use of lead can be eliminated or reduced.

[Employing LED lightings]

By employing LED light, various materials used for light became mercury free.

Lead-free Design of Base Plate, RoHS Compliance and Elimination of Specific Chemical Substances (15 Classifications)

Continuous concern over RoHS compliance, eliminating 15 classifications of specific chemical substances and using the lead-free technique for main circuit boards.



Please select according to the image and the feature of the building.

It features a design pursuing comfort and functionality.



RESIDENCE



OFFICE



HOTEL



SHOP



Design variations

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.

DLX-22 / DX-22



OPTIONAL TL-1



DLX-21 / DX-21



OPTIONAL SL-V2



DLX-24 / DX-24



Front side view



Back side view



Design variations

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.

OPTIONAL PRM-2



DLX-22 / DX-22



DLX-23 / DX-23



DLX-24 / DX-24



PRM-1



Front side view



Back side view



Design variations

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.

PRM-1



DLX-25 / DX-25



OPTIONAL PRM-2



STANDARD
SL-1



DLX-24 / DX-24



Front side view



Back side view



Design variations

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.

DLX-24 / DX-24



OPTIONAL TL-1



PRM-1



STANDARD SL-1




DLX-23 / DX-23



Front side view



Back side view

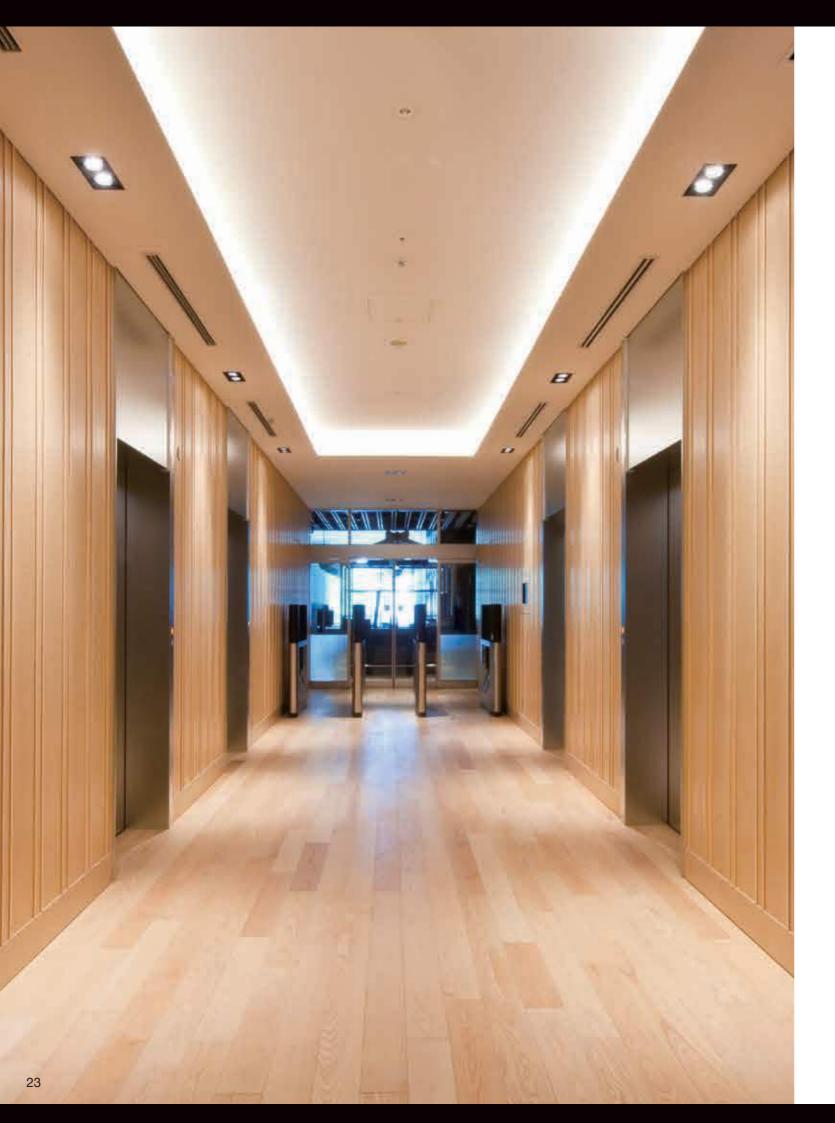

Design variations













Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 1


The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.



Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 2

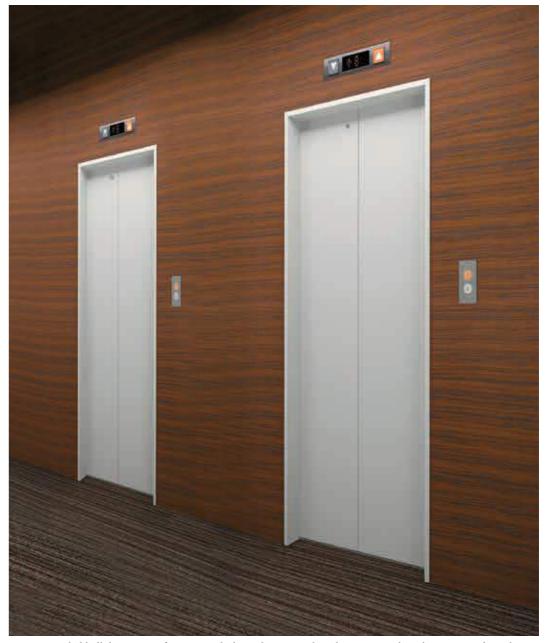

Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 3

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.



Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 4



Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 5

The publication of this page is an example of design.

Please refer to the "DESIGN SELECTION" catalog for each the condition and other designs.



Note: Provided hall design specifications with the wide type jamb and transoms, when there is a need to adapt to fireproof specifications.

Design plan 6



Functions

○:STANDARD △:	OPTIONAL
---------------	----------

Functions	Notes	Descriptions					
	Simplex selective-collective fully automatic operation	Fully automatic operation by hall and car calls for single car	0				
	Duplex selective collective fully automatic operation (Note 1)	Fully automatic operation for 2 cars in the same group					
Operations	Group supervisory control system	For supervisory operation of groups of more than 3 cars					
	Independent operation	Lift car separated from group control operation and responding to car call only	Δ				
Operations Safety Functions	Attendant operation	Operation by attendant by switch & button provided at service cabinet in COP					
	Automatic landing function when system fails	When system failure occurs, the lift will automatically land at the nearest floor and the door will open for passengers to exit	0				
	Automatic withdrawn from group control	If an elevator under a group supervisory operation fails to run for some reason, the elevator is cut out of the group and the other elevators automatically back up the faulty one to continue the group supervisory operation.	0				
	Car inspection operation (INS)	During car inspection operation, the lift car will run at slowly without responding to hall call	0				
	Overload protection	The car overload buzzer will sound to prevent overloading and the doors will remain open	0				
	Door open when the lift car is overloaded	The door will re-open when overload is detected even if though it is closing	0				
	Fireman's operation	In the event of fire, when the Fireman's switch is activated, the designated lift will be ready for firemen to use					
	Fire emergency operation	In the event of fire, all lifts will return to the designated floor and stop operation to allow passengers to exit					
	Power failure emergency operation	In the event of power failure, all lifts will return to the designated floor by emergency power supply from the building to allow passengers to exit					
	Automatic landing during power failure (TOSLANDER)	In the event of power failure, the lift will land at the nearest floor by emergency battery					
	Earthquake emergency operation	In the event of an earthquake, the elevator will detect the seismic signal and land at the nearest floor					
	In-car emergency lamp (self-charging)	In the event of power failure, the in-car emergency lamp will be activated					
	Emergency call button	A button for passenger to make an emergency call when they are trapped inside the lift	0				
	Emergency operation indication at COP	In the event of an emergency, the emergency operation status will be displayed at COP					
	Mechanical door safety	When the mechanical door safety device is touched by a passenger, the door will open	0				
	Multi-beam door safety sensor (or light curtain door safety sensor)	When the multi-beam door safety device senses a passenger, the door will open					
	2-in-1 door safety (multi-beam door safety + mechanical door safety)	A combination of multi-beam door safety and mechanical door safety	Δ				
	Door nudging feature with buzzer	A buzzer sounds and the doors slowly close when they have remained open beyond the preset period	Δ				
	Home landing	To reduce passenger waiting time, the lift will return to the designated floor and stand by	Δ				
Service Functions	Service floor cut-off selection	Installing a switch or a timer on the supervisory panel, disables registration of car calls or hall calls for a basement floor's or an intermediate floors or intermediate floors thus engaging in non-stop (bypass) without servicing there.	Δ				
	Service floor cut-off selection (Soft setting type)	This is of the free setting type, where the elevator superintendent for every building is free to set and modify service cut-off floors even after start in use. This is the most appropriate type for such office buildings as their tenants are not yet fixed before completion.					

Note 1 : Not applicable to lift car with through door

2:>5 floors and car weight <150kg
3: For details of interface for building management system, please consult our local distributor.


○:STANDARD △:OPTIONAL


		○:STANDARD △:OPT	IONAL				
Functions	Notes	Descriptions					
	Full car bypass (Note 2)	When the lift car is full, the lift will bypass all hall calls and go straight to the designated floor	Δ				
	Car call cancellation	The floor call can be cancelled from the COP by pressing the floor button twice within 3 second	0				
	Nuisance call cancellation	Incorrect or nuisance floor calls can be cancelled to eliminate unnecessary operation	0				
	Repeated door opening	When an obstacle is detected, the door will repeatedly open and close repeatedly pending removal of the obstacle	0				
	Door nudging	Push and hold the door close button for 2 seconds or keep the door completely opened for 15 seconds rectify the situation when the electric door safety malfunctions.	Δ				
	Adjustable door opening time	Adjusts the door opening time to reflect building usage	0				
	Door open extension button	Extends the door opening time	Δ				
	Car chime	A chime installed in the car ceiling will sound when the lift arrives	Δ				
	Hall chime	A chime installed in the lift lobby will sound when the lift arrives	Δ				
	Hall lantern	The hall lantern will light up when the lift arrived	Δ				
Service Functions	Sub-car operating panel for single entrance	Additional car operating panel					
	Sub-car operating panel for double entrance						
	Car full load indicator	Full Load will display on the hall indicator when the lift car is full					
	Out of service indicator	Out of Service will display on the hall indicator when the lift car is faulty					
	Parking operation (manual)	Parks the lift at the designated floor by the key-switch	Δ				
	Parking operation (automatic)	Parks the lift at the designated floor automatically	Δ				
	Car lighting automatic cut-off	When the lift is not in operation after a pre-determined period of time, the car light will turn off automatically	0				
	Ventilation fan automatic cut-off	When the lift is not in operation after a pre-determined period of time, the ventilation fan will turn off automatically	0				
	Door Open button lamp (for automatically cut-off car lighting)	The "Door Open" button will remain lit when the lift car light is turned off automatically	0				
	Nuisance call cancellation at reversal	Cancel intentionally registered nuisance calls automatically in the reversal travel direction					
	Multi-channel intercom	The intercom system can communicate with multi-stations simultaneously					
	Designated floor stop operation	Automatically stops the lift at the designated floor for crime prevention purposes	Δ				
	Card access system	Allows activation of the designated floor call by IC card ** Card Access System by others	Δ				
	Speech synthesizer	Announces car operations	Δ				
	Supervisory panel (Note 3)	Located in the building control room, etc. to monitor the status and control of each lift	Δ				

Installation plan / Power source plan

■ Installation plan An installation diagram for 8 to 24 passenger

► Hoistway plan

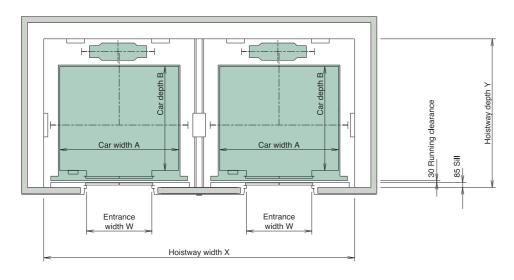

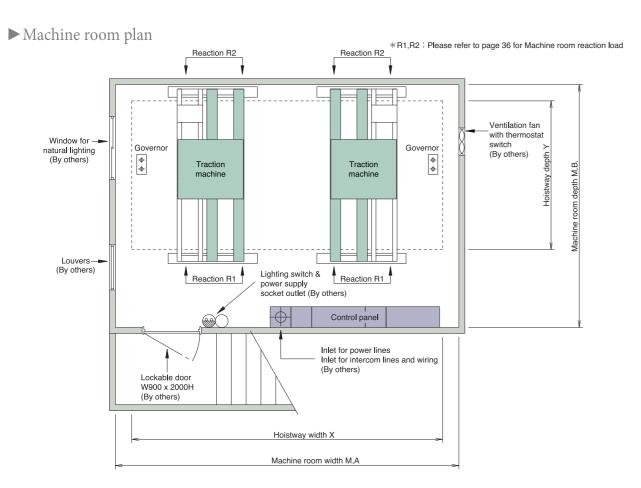

► Hoistway shaft and machine room dimensions

Application model	Rated		Loading	Entran	ce (mm)	Internal car	Hoistway s	shaft (mm)	Machine r	oom (mm)
	speed (m/min)	(persons)	canacity	Width	Height	dimensions (mm) A × B	Single shaft* X × Y	Dual shaft** X × Y	Single shaft* MA × MB	Dual shaft** MA × MB
P8		8	630	800	2100	1400×1100	1940×1885	4030×1885	2340×3350	4500×3350
P12			900	900	2100	1600×1350	2100×2135	4350×2135	2540×3600	4830×3600
P13			120	1000	900	2100	1600×1500	2100×2285	4350×2285	2540×3750
P15	150 180 15 115	1150	1000	2100	1800×1500	2300×2285	4750×2285	2740×3750	5230×3750	
P18	210 240	18	1350	1100	2100	2000×1500	2500×2285	5150×2285	2940×3750	5630×3750
P21	300	21	1600	1100	2100	2000×1700	2500×2485	5150×2485	2940×3950	5630×3950
P24		24	1800	1200	2100	2100×1750	2700×2535	5550×2535	3040×4000	5830×4000
P27		27	2025	1200	2100	2100×1950	2700×2735	5550×2735	3040×4200	5830×4200


▶ Basic specifications

Item	Contents	Remarks
Application	For passenger	
Control system	Variable voltage variable frequency control system (Gearless)	
Operation function	Selective-collective full automatic operation	
Power supply	For powers: Three phase AC. 380V-50Hz 415V-50Hz	
	For lightings: Single phase AC. 220V-50Hz 240V-50Hz	
Roping	2:1D (Two to one double wrap)	
Maximum number of floors	64stops	In case of a double entrance elevator, 128 numbers of entrance
Maximum travel	200m	
Landing accuracy	±5mm	
Entrance direction	Single entrance	Double entrance applicable
Machine room location	Hoistway top	
Control panel type	CL600	
Door type	CO, 2S (DBL-6)	
Minimum floor height	Entrance height +Height of door panel extension +450mm	

Installation plan / Power source plan

■ Hoistway section

► Hoistway section <Standard type>

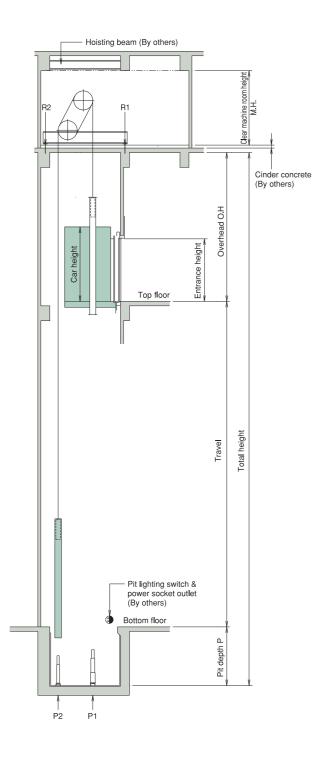

► Hoistway shaft & Machine room dimensions

Rated		head (mm)	Pit depth P (mm)	Clear machine room height M.H(mm)	
(m/min)	P8,P12	Other			
120	5950	5350	2150		
150	6150	5550	2450		
180	6450	5850	2750	2250	
210	6850	6250 3250			
240	7450	6850	3850		
300	8400	7800	4050		

Note: The above data table of "O.H" dimensions is based Cage height: 2500mm.

► Reaction and load

Туре	Rated			Pit reaction load (kN)			
	(m/min)	reaction load (kN) R1 (Cage) R2 (C/W) P 60.9 79.5 64.2 84.3 67.2 88.2 63.3 87.2 68.8 95.6 69.5 96 66.3 94.8 69.4 99.6 70 99.8 69.1 98.3 72.1 103.1 75.2 107.3 72.8 103.1 75.9 107.9 79.1 112.1 78 114.7		P1 (Cage)	P2 (C/W)		
	120			107.6	101.3		
	150	1	79.5	107.6	101.3		
D0 C0	180	60.9		107.6	101.3		
P8-CU	210]		108.4	102.1		
P12-CO P13-CO P15-CO P21-CO	240	64.2	84.3	116.4	110.1		
	300	67.2	on load (kN) (kN) e) R2 (C/W) P1 (Cage) P2 (C/W) 107.6 101.3 107.6 101.3 107.6 101.3 108.4 102.1 108.4 102.1 112.8 108.4 110.1 112.8 108.4 110.1 112.8 108.2 119.1 112.8 110.7 122.1 110.7 122.1 110.7 122.9 111.5 109.6 130.5 119.1 119.1 109.6 133.2 121.8 127.6 113.9 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 127.6 127.0 128.6 127.0 128.6				
	120			122.1	110.3		
	150	(2.2	07.0	122.1	110.7		
D12 CO	180	63.3	87.2	122.1	110.7		
P12-C0	210]		122.9	111.5		
	240	68.8	95.6	130.5	119.1		
	300 69.5 96 120 150 180 210 240 69.4 99.6 300 70 99.8 120 150 180 210 240 72.1 103.1 300 75.2 107.3 120 150 180 72.8 103.1	96	133.2	121.8			
	120			127.6			
		1					
		66.3	94.8				
P13-C0		1					
P13-CO		69.4	99.6		122.6		
	120 150 180 69.						
		69.1	98.3				
P15-CO							
		-					
		72.1	103.1				
		75.2					
		-					
		72.8					
P18-CO	210	1					
	240	75.9	107.9				
	300						
	120	7 7.1	112.1	Reference P1 (Cage) P2 (C/W) 107.6 101.3 107.6 101.3 107.6 101.3 108.4 102.1 84.3 116.4 110.1 88.2 119.1 112.8 122.1 110.7 122.1 110.7 122.9 111.5 110.7 122.9 111.5 96 130.5 119.1 19.9 13.2 121.8 127.6 113.9 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 114.3 127.6 127.2 14.3 127.6 127.2 126.9 137.0 120.5			
	150	-					
	180	78	114.7				
P21-C0	210	1					
	240	80.6	118 9				
	300	82					
	120	02	120.3	84.3			
	150	1					
	180	81.2	119.1				
P24-CO	210	-					
		92.7	122.2				
	240	83.7	l				
	300	84.8	123.1				
	120	-					
	150	87.2	132.4				
P27-CO	180	-					
	210	00.5	1247				
	240	88.5					
	300	90.1	137.3	197.4	163.9		

Note: The condition of the above data calculation are Travel: 120m, additional: 200kg of optional cage weight.

^{*} Please contact our local distributor to check for other conditions.

Installation plan / Power source plan

■ Power source plan Power facility plan for 8 to 24 passenger

► Single elevator use (1 line per elevator) 380v-50Hz

_	Rated	Motor	Motor source	Non-fuse	Non-fuse circuit Total applicable length of the power source line (m)							Heat
Type	speed (m/min)	capacity (kW)	capacity (kVA)	breaker (A)	5.5 (mm²)	8 (mm²)	14 (mm²)	22 (mm²)	38 (mm²)	60 (mm²)	line size (mm²)	generation (W)
	120	8	13	40	81	126	224	351	_	_	3.5	2000
	150	10	15	40	66	102	182	285	482	_	3.5	2450
P8-CO	180	12	18	40	54	85	151	236	399	_	3.5	2950
Po-CO	210	14	20	50	47	73	131	204	346	_	3.5	3450
	240	16	22	50	41	64	114	178	300	483	3.5	3950
	300	20	27	60	0	46	89	139	235	379	5.5	4900
	120	12	17	40	69	107	191	299	_	_	3.5	2800
	150	14	20	50	54	85	151	236	399	_	3.5	3500
P12-CO	180	18	24	50	46	71	126	198	334	_	3.5	4200
P12-C0	210	20	27	60	0	57	109	170	288	463	5.5	4900
	240	22	30	60	0	48	92	144	244	392	5.5	5600
	300	28	37	100	0	0	68	115	195	31	5.5	7000
	120	12	18	50	66	102	182	285	482	_	3.5	3150
	150	16	22	50	50	79	140	219	370	_	3.5	3900
242.60	180	18	26	60	42	66	117	183	309	497	5.5	4700
P13-CO	210	22	29	60	0	52	99	155	262	422	5.5	5450
	240	24	33	75	0	0	80	135	228	366	5.5	6250
	300	30	40	100	0	0	64	108	183	295	5.5	7800
	120	14	21	50	64	100	178	279	471	_	3.5	3600
	150	18	25	60	48	74	133	208	351	_	5.5	4500
	180	22	29	60	0	57	110	173	292	469	5.5	5350
P15-CO	210	26	33	75	0	0	87	146	247	397	5.5	6250
	240	28	37	100	0	0	76	129	218	351	5.5	7150
	300	36	46	125	0	0	59	99	168	271	8.0	8950
	120	18	24	50	54	85	151	236	399	_	3.5	4200
	150	22	28	60	0	62	119	186	314	_	5.5	5250
240.50	180	26	33	75	0	0	92	155	262	422	5.5	6300
P18-CO	210	30	38	100	0	0	78	132	223	358	5.5	7350
	240	34	43	100	0	0	64	108	183	295	5.5	8400
	300	42	53	125	0	0	0	89	162	260	8.0	10500
	120	20	27	60	0	79	151	236	399	_	5.5	5000
	150	24	33	75	0	0	104	175	296	476	5.5	6250
	180	30	39	100	0	0	85	144	244	392	5.5	7450
P21-CO	210	34	44	100	0	0	73	124	209	336	5.5	8700
	240	40	50	125	0	0	61	103	174	280	8.0	9950
	300	48	62	150	0	0	0	74	135	218	8.0	12450
	120	22	30	60	0	64	122	192	324	_	5.5	5600
	150	28	37	100	0	0	90	151	256	411	5.5	7000
	180	34	43	100	0	0	74	125	211	340	5.5	8400
P24-CO	210	38	50	125	0	0	63	105	179	287	8.0	9800
	240	44	56	125	0	0	0	85	156	250	8.0	11200
	300	54	69	150	0	0	0	0	115	199	8.0	14000
	120	26	33	75	0	0	107	180	305	490	5.5	6300
	150	32	41	100	0	0	84	142	241	387	5.5	7850
	180	38	48	125	0	0	69	117	197	317	8.0	9450
P27-CO	210	44	55	125	0	0	0	92	167	269	8.0	11000
	240	50	63	150	0	0	0	80	146	234	8.0	12600
	300	62	77	175	0	0	0	0	108	187	14.0	15700

Note: The condition of the above data calculation are Travel: 120m, additional: 200kg of optional cage weight.

■ Works by others Works below are not included in the installation works of the elevator:

► Hoistways

- 1. Hoistway construction and fire-proofing work, and opening work for jambs, indicators and push-buttons, etc. Please note that chipping or padding work is performed as required, in case the structural error is 30 mm or more.
- 2. Installation work of separating beams, intermediate beam, back beam and lateral beams (as required).
- 3. Installation work of the base plate for each floor and of bed steel for furnishing the equipments related to landing entrance, in case of hoistways of steel structure of PC structure.
- 4. Fire-proofing work for the steel frame material in steel structured hoistways, and fire-proofing work around landing entrances (as required).
- 5. Finishing works of walls and floors, etc., around entrances, after furnishing equipments related to landing entrances.
- 6. Furnishing work of base steel or others for furnishing rail brackets, particularly for elevated floor heights (as required).
- 7. Installation work of the entrance or the gangway for pit inspection (as required).
- 8. Water-proofing work of the pit (including drainage if necessary).
- 9. Re-arrangement of the building body in case of usable space under the pit.
- 10. Installation work of emergency exits for rescue purposes when there are floors at which the elevator does not stop and installation of a fascia plate.
- 11. Shelter equipments from rain at landing entrances directly exposed to the air in the place like roof.
- 12. Installation work of hooks or beams on top of the elevator shaft.
- 13. Installation work of lighting in hoistway (as required).
- 14. Installation work of vent opening at the top of shaft (as required).
- 15. Installation work of a net or wall to prevent falling into the pit (in case of the pit level is different.)
- 16. All works related to the building structure other than those above.

► Machine rooms

- 1. Construction work for machine rooms and installation works for their entrances (including sound proofing work if necessary)
- 2. Fire-proofing work for machine rooms and opening work for machine room floors.
- 3. Installation work of machine beam supports and spacers.
- 4. Cinder concreting and its finishing work after floor piping in machine rooms.
- 5. Installation work of hooks or beams on ceilings in machine rooms.
- 6. Installation work of stairs leading to machine rooms and stairs in machine rooms (if necessary)
- 7. Installation work of lighting windows.
- 8. Dust-proof finish of the floor.

► Works for Equipments

- 1. Wiring work of the power supply for motors and that for lighting equipments, and of grounding to the power source panels of elevators in the Elevator shaft.
- 2. Wiring work of the power supply to the supervisory panels.
- 3. Piping and wiring works of interphones outside the hoistway and of others necessary for elevators.
- 4. Supply and installation of switching devices for emergency power supply in the event of power failure and two pairs of relay contacts for normal / emergency power identification, and their piping and wiring work (if necessary).
- 5. Piping and wiring work of supervisory panels, alarm panels and inter-communication systems, etc., outside the hoistways.
- 6. Furnishing work of receptacles for inspection in pits.

► Temporary Works

The following matters must be arranged:

- 1. To secure the site office for installation work and the stock yard for materials without charge.
- 2. Enclosure to be used during the installation work.
- 3. Supply of electric power for installation work and the trial operation for adjustment.
- 4. Security to ensure sufficient passage for carrying heavy goods.
- 5. Regarding the use of the elevator for the building construction work, a contract with a separate written estimate is required.

Note

When planning elevator equipments, please take the following items into consideration:

- 1. Provide the power facility so that the voltage regulation of power supply at the receiving terminals in the hoistway is kept within $\pm 10\%$ for motor, and $\pm 2\%$ for lighting equipments.
- In the hoistways, please ensure the temperature does not exceed 40 °C and humidity 90% (monthly mean) and 95% (daily mean).
- 3. Please do not allow ingress of chemically toxic gas or excess amount of dust enter into the hoistways, that makes the metal or electrical contacts corrode.

For the estimate inquiry, please inform us of the following:

- 1. Building name and address.
- 2. Desired type and number of set.
- 3. Number of stops.
- 4. Floor height.
- 5. Voltage and frequency of main power supply.
- 6. Desired completion date.

Global Network

- Head office / Manufacturing base
- Head office

TOSHIBA ELEVATOR AND BUILDING SYSTEMS CORPORATION

Head Office: 72-34, Horikawa-cho, Saiwai-ku, Kawasaki 212-8585, Japan Factory: 1 Toshiba-cho, Fuchu City, Tokyo 183-8511

TOSHIBA ELEVATOR PRODUCTS CORPORATION

Head Office: 1000, Hamada, Amiboshi Ward, Himeji City, Hyogo Prefecture

TOSHIBA ELEVATOR KOREA INC.

Head Office: 14th Fl (Jea-neung Bldg), Euljiro 6, Chung-gu, Seoul, The Republic of Korea

C TOSHIBA ELEVATOR (SHENYANG) CO., LTD.

Head Office: No.5 Feiyun Road Hunnan New District Shenyang, The People's Republic of China

TOSHIBA ELEVATOR (CHINA) CO., LTD.

Head Office: No. 685 Wen Chuan Road, Baoshan District, Shanghai 201901, The People's Republic of China.

E CHEVALIER (HK) LIMITED

Head Office: 22nd Floor, Chevalier Commercial Centre, 8 Wang Hoi Road, Kowloon Bay, Hong Kong

CHEVALIER SINGAPORE HOLDINGS PTE. LTD. Head Office: 23 Genting Road #07-01/02 Chevalier House, Singapore 349481

M S ELEVATORS Sdn. Bhd. Head Office: 8th Floor, Wisma Penang Garden, 42

Jalan Sultan Ahmad Shah, 10050 Penang, Malaysia. Factory: 2530, Lorong Perusahaan 10, Prai Industrial Estate, 13600 Prai, Province, Wellesley, Malaysia.

M S ELEVATORS ENGINEERING Sdn. Bhd.

Head Office: 8th Floor, Wisma Penang Garden, 42 Jalan Sultan Ahmad Shah, 10050 Penang, Malaysia.

KL Office: Wisma MS, No.15, Jalan 2/116 D,

Kuchai Entrepreneurs' Park, Off Jalan Kuchai Lama, 58200 Kuala Lumpur, Malaysia.

TOSHIBA JOHNSON ELEVATORS (INDIA) PVT. LTD.

Head Office: 602, 6th Floor, C&B Square, Sangan Complex 127, Andheri Kurla Road. Andheri (East), Mumbai, 400059 India

TOSHIBA ELEVATOR MIDDLE EAST (L.L.C.)

Head Office: P. O. Box 16733, Dubai, UAE

SIAM ELEVATOR & ESCALATOR CO., LTD. Head Office: 5 Soi Premruthai Village 20 Srinakarin Road, Nongbon Prawech Bangkok 10250

Toshiba Elevator (Vietnam) Limited Liability Company

Head Office: No. 36, Street 96, Quarter 2, Thanh My Loi Ward, District 2, Ho Chi Minh City, Vietnam

Together with our global partners, we connect with Asia and then the world, through our technology and our spirit.

This planet is our shared heritage. We must live together, grow together and delight in one another.

[For more information]

Toshiba Elevator and Building Systems Corporation

Head office: 72-34, Horikawa-cho, Saiwai-ku, Kawasaki 212-8585, Japan

http://www.toshiba-elevator.co.jp

